



## Update procedure for CCU

To control if your system is up to date or to update it, the following instructions will guide you:

1. Download and save the latest file on a USB key.  
If you have downloaded the **.zi\_** file, you have the file named '**CCU Control v2.5.zi\_**' on your USB key. Then go directly to the next step ([File extraction from the .zip file](#)).

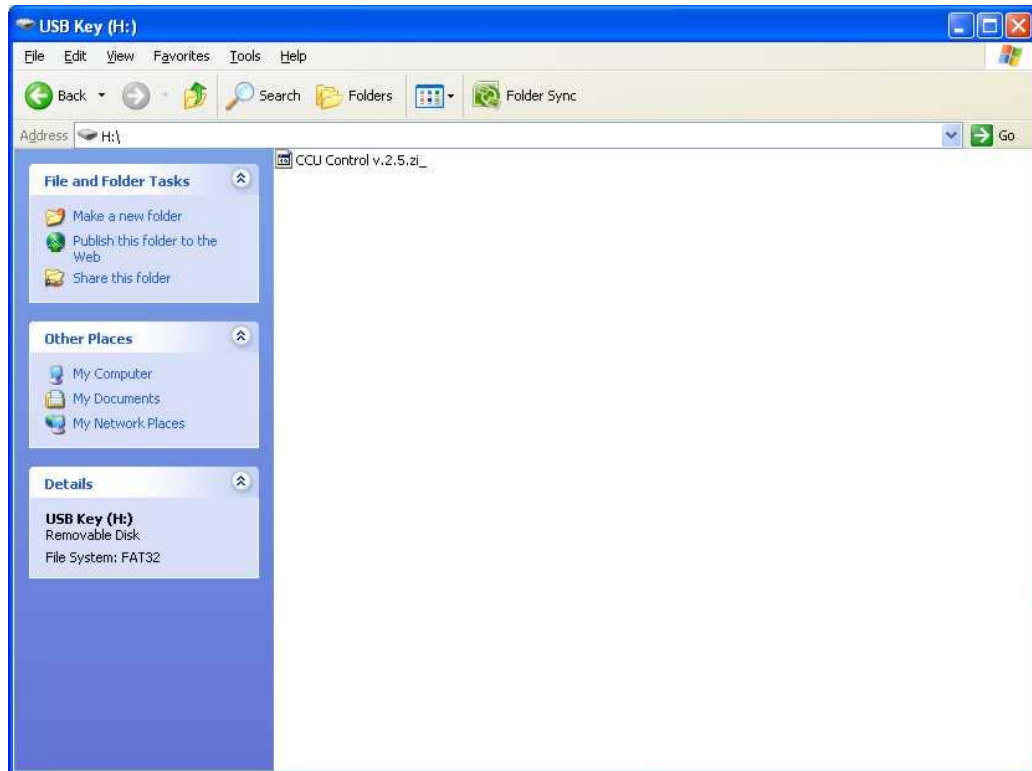

If you have downloaded the .ex\_ file, you have the file named 'CCU Control v2.5.ex\_' on your USB key. Then go directly to step 11 (File extraction from the .exe file).

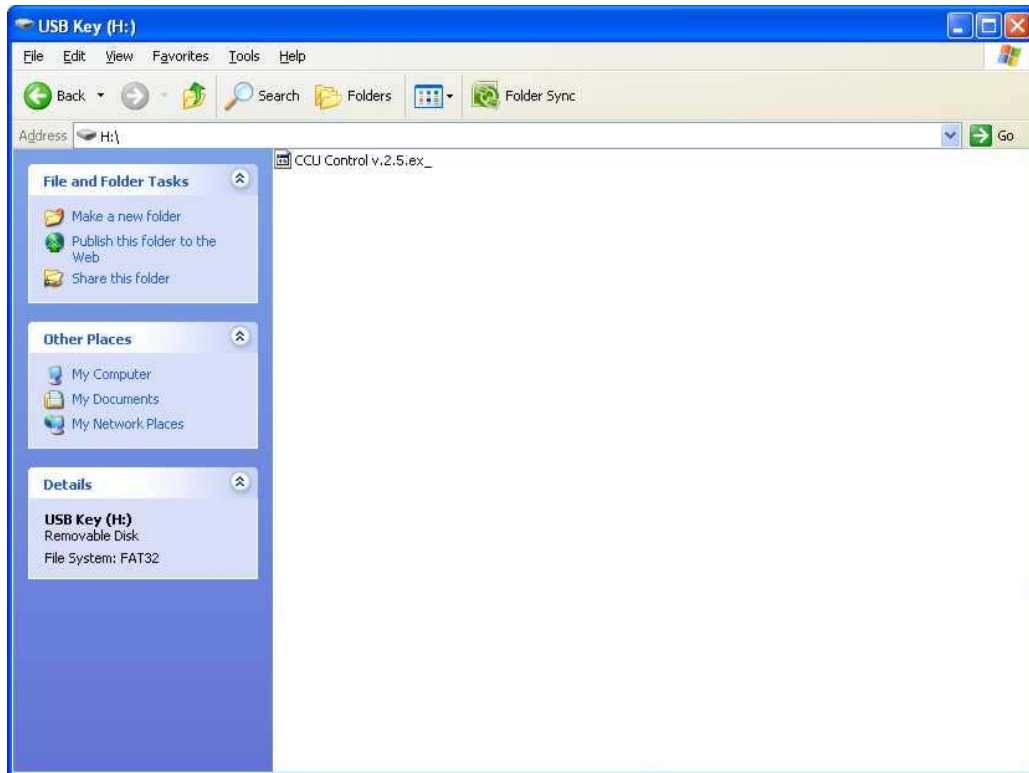

**PRAGMA INDUSTRIES SAS**


665 rue de Bassilour, ZA de Bassilour, 64210 Bidart  
Tel : +33 (0)559 512 755 Fax : +33 (0)559 230 798

[www.pragma-industries.com](http://www.pragma-industries.com) - [contact@pragma-industries.com](mailto:contact@pragma-industries.com)


SAS au capital de 459 880€ RCS Bayonne 478 038 219 00034 APE 7490B TVA FR30 478 038 219

## File extraction from the .zip file


2. Rename the .zi\_ file on .zip

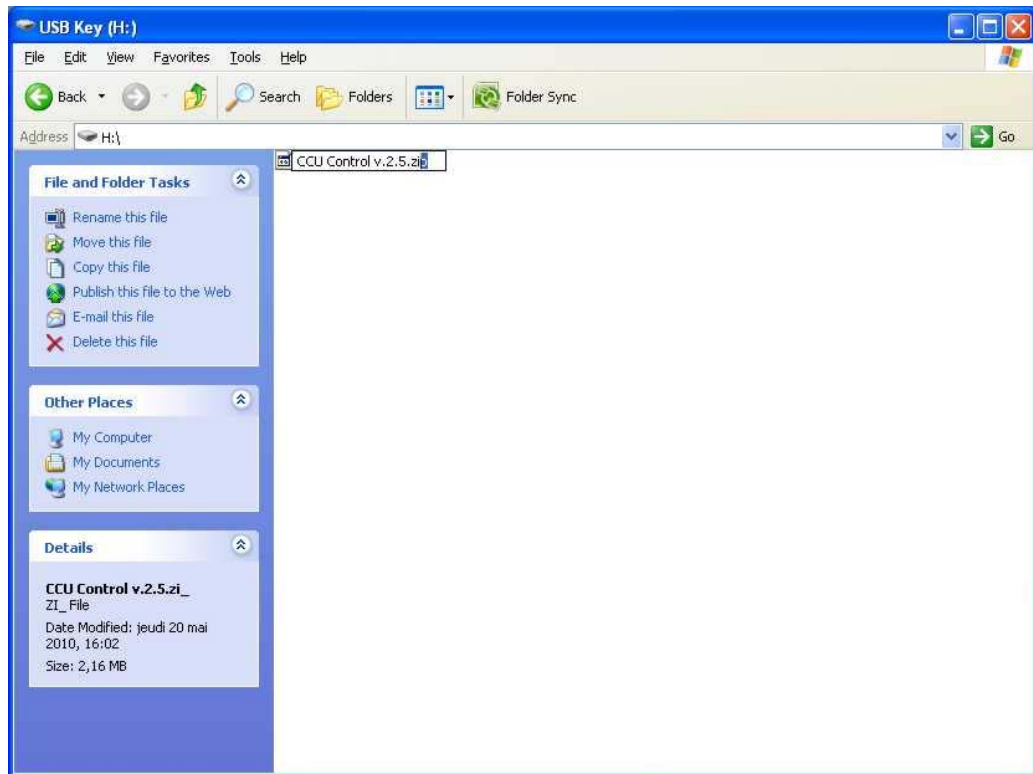

Now you have the file named 'CCU Control v2.5.zip' on your USB key.

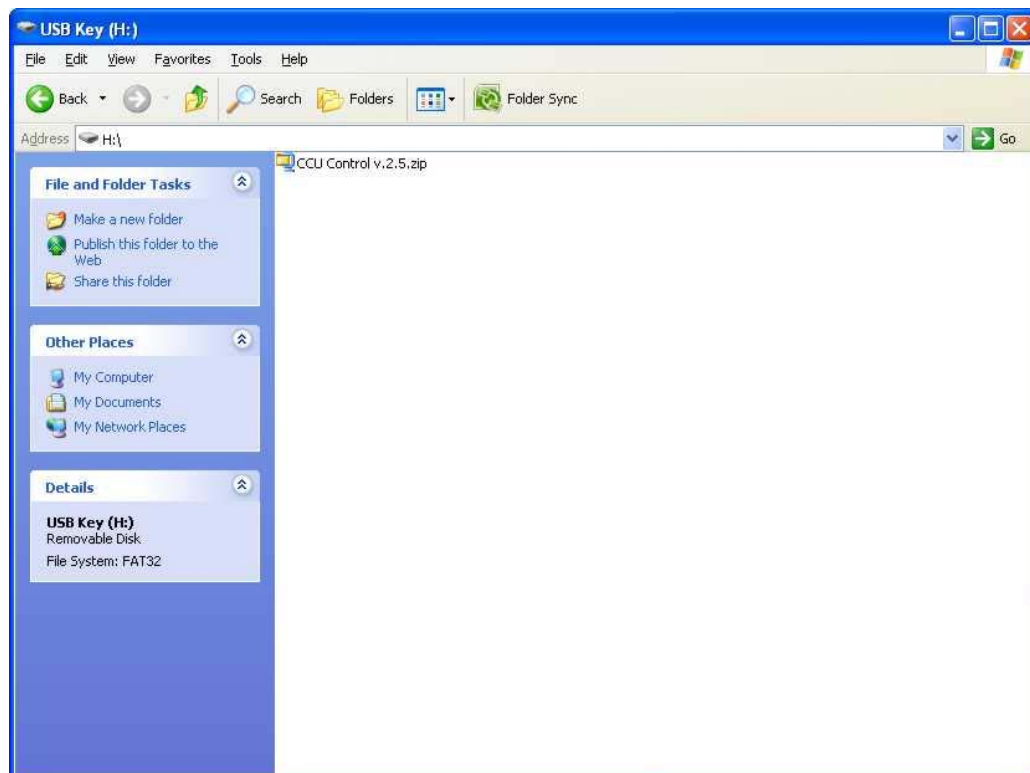

3. Double click on the file '**CCU Control v.X.X.zip**' (where X.X is the version number) name to unzip it. If you are using the **Windows Extraction Wizard** go to the next step. If you are using **WinZip**, go to step 8 ([Using WinZip](#)). In other cases, prefer to use the **Windows Extraction Wizard** to be sure to have good results. In this last case do a **right click** on the file name, select '**Open With**' in the menu, then '**Compressed (zipped) Folders**' to force the system to use the **Windows Extraction Wizard**. Now follow the next step ([Using the Windows Extraction Wizard](#)).

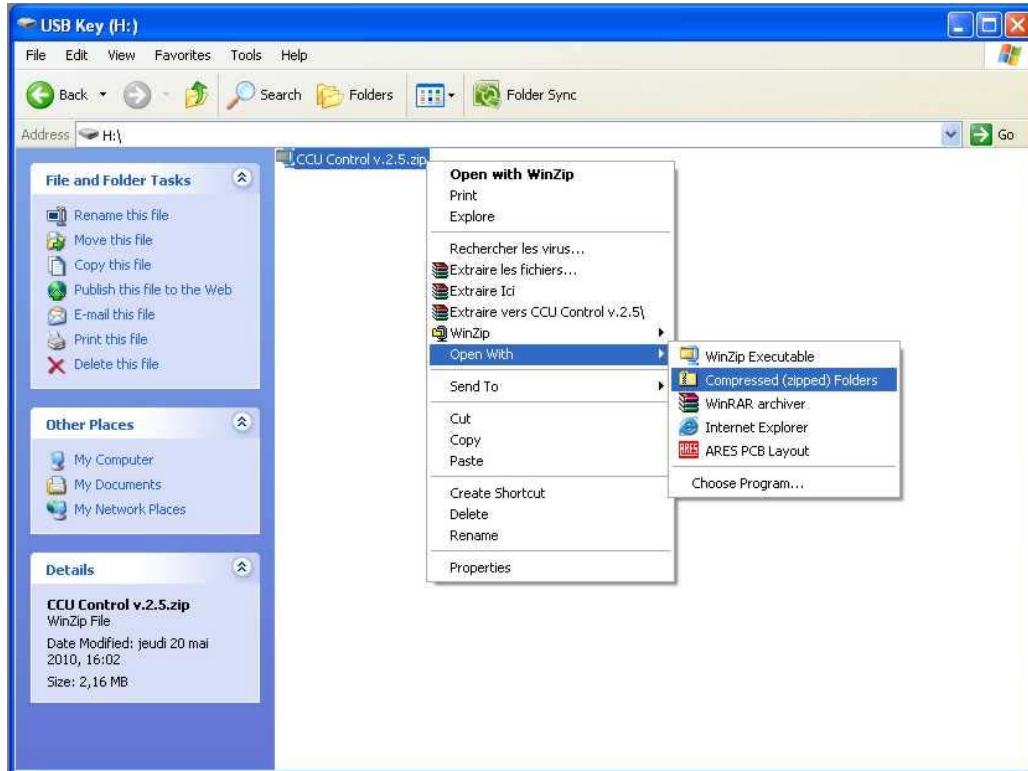

**PRAGMA INDUSTRIES SAS**


665 rue de Bassilour, ZA de Bassilour, 64210 Bidart  
Tel : +33 (0)559 512 755 Fax : +33 (0)559 230 798

[www.pragma-industries.com](http://www.pragma-industries.com) - [contact@pragma-industries.com](mailto:contact@pragma-industries.com)


SAS au capital de 459 880€ RCS Bayonne 478 038 219 00034 APE 7490B TVA FR30 478 038 219

## Using the Windows Extraction Wizard

4. You are in the '**Compressed (zipped) Folders**' window. Select '**Extract all files**' on the left side of the window.

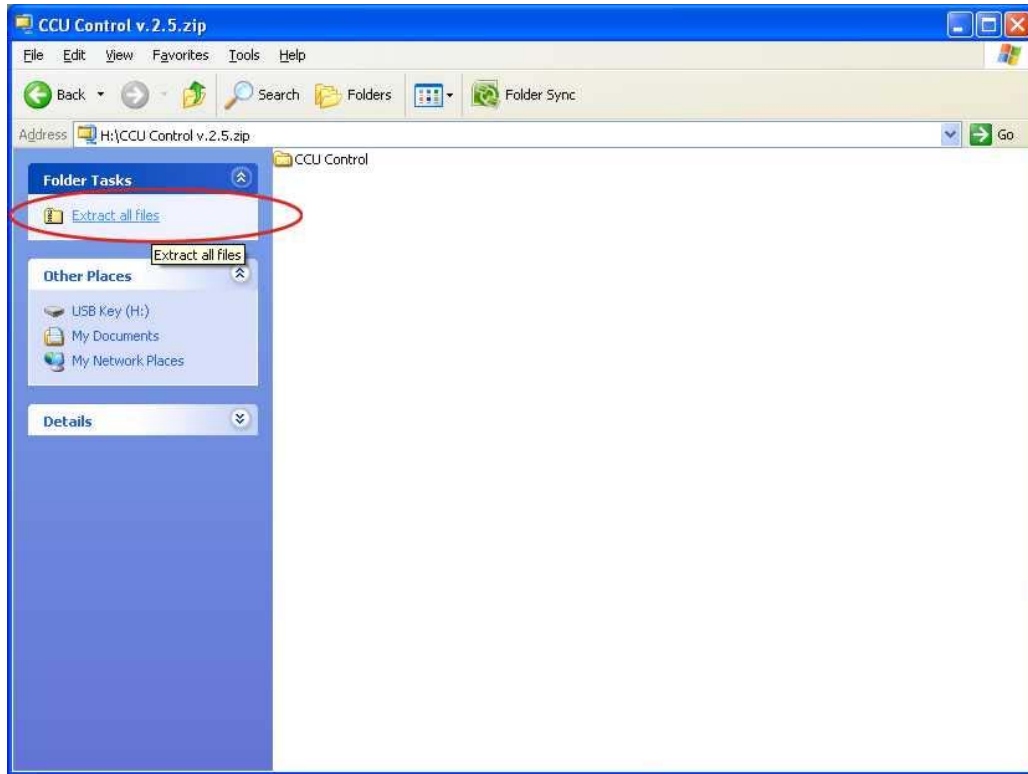

5. A new window named '**Extraction Wizard**' appears. Click on the '**Next >**' button.

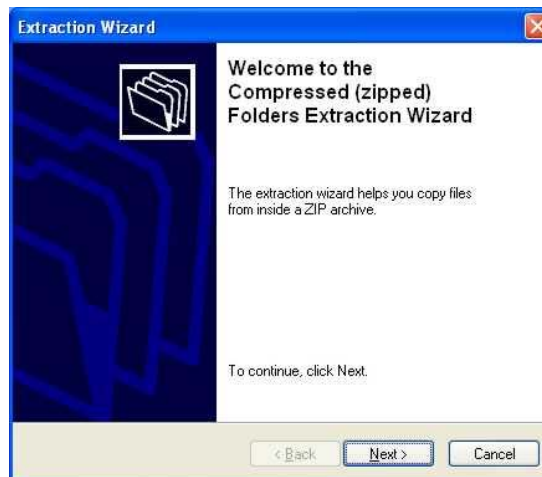

6. The system asks you the destination directory to extract files.




Select the USB Key drive letter (in my case it's the drive H: It's probably another for you !) by enter it directly or using the 'Browse...' button.

**Warning: Only the letter of your drive must appear in this line (see picture).**



7. Click on the 'Next >' button. The file extraction start. When done, the extraction procedure is finish. Click on the 'Finish' button and go directly to step 15 (Verify your files).

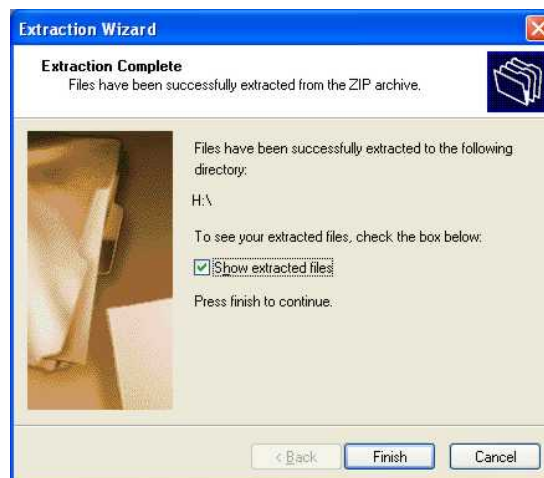

**PRAGMA INDUSTRIES SAS**


665 rue de Bassilour, ZA de Bassilour, 64210 Bidart  
Tel : +33 (0)559 512 755 Fax : +33 (0)559 230 798

www.pragma-industries.com - contact@pragma-industries.com

SAS au capital de 459 880€ RCS Bayonne 478 038 219 00034 APE 7490B TVA FR30 478 038 219

## Using WinZip


8. You are in the 'WinZip' window. Click on the 'Extract' button.

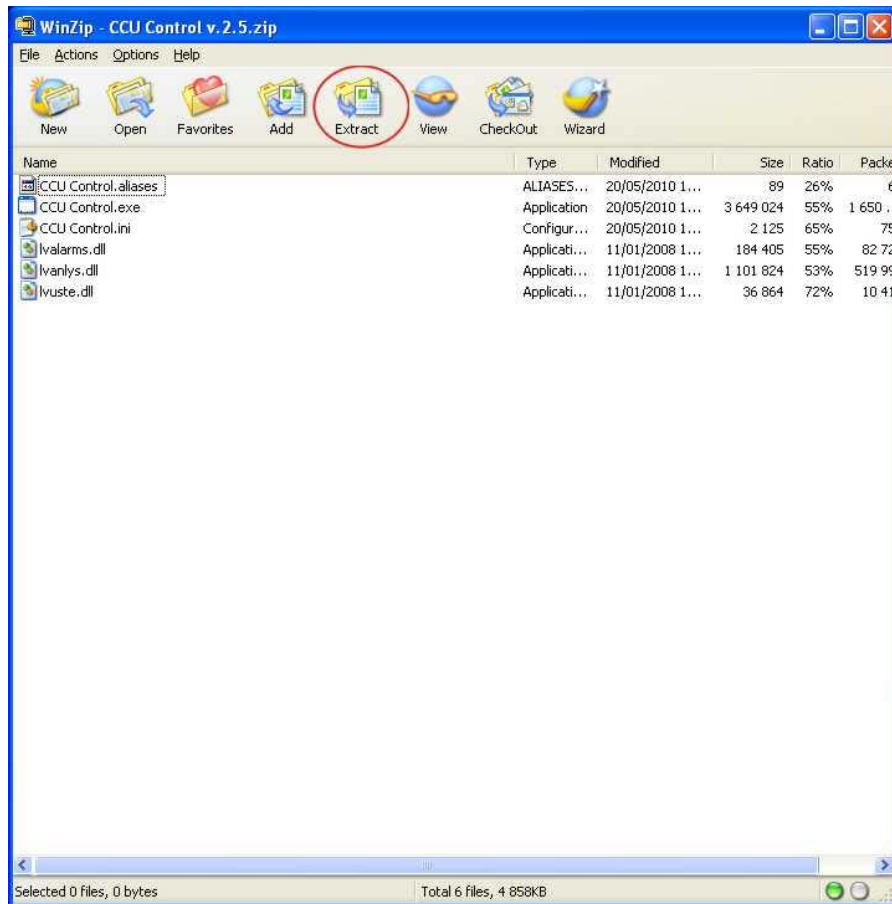

9. A new window named 'Extract' is open. On the line 'Extract to:' type the letter of your USB key, or select it on the 'Folders/drives:'. In this example the letter of the drive is 'H:'. You probably have another letter. **In all cases, verify that only the letter of the drive is indicated in the 'Extract to:' line. Verify the options on the 'Files' Panel.**



10. Now click on the 'Extract' button. Files are extracted and the procedure is finish. You can close the Winzip program. Then go directly to the step 15 (Verify your files).

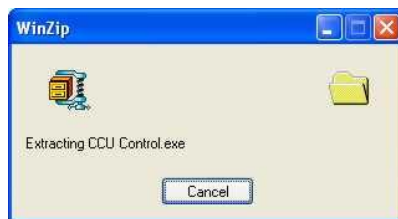

**PRAGMA INDUSTRIES SAS**


665 rue de Bassilour, ZA de Bassilour, 64210 Bidart  
Tel : +33 (0)559 512 755 Fax : +33 (0)559 230 798

[www.pragma-industries.com](http://www.pragma-industries.com) - [contact@pragma-industries.com](mailto:contact@pragma-industries.com)


SAS au capital de 459 880€ RCS Bayonne 478 038 219 00034 APE 7490B TVA FR30 478 038 219

## File extraction from the .exe file

### 11. Rename the .ex\_ file on .exe

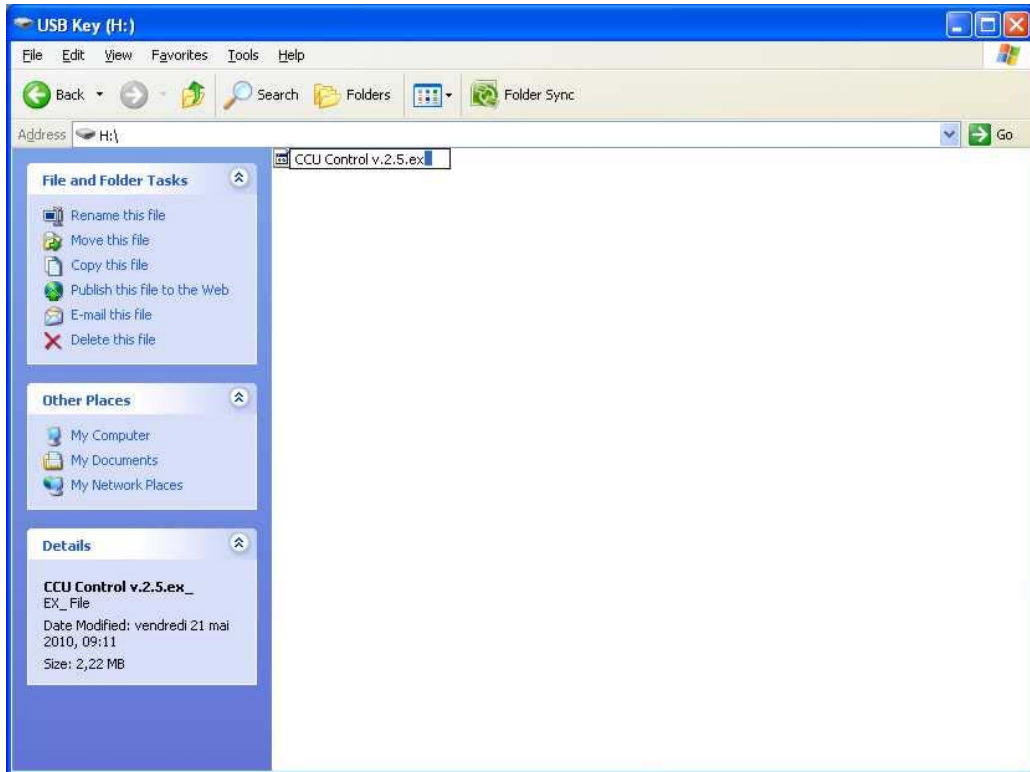


Now you have the file named '**CCU Control v2.5.exe**' on your USB key.

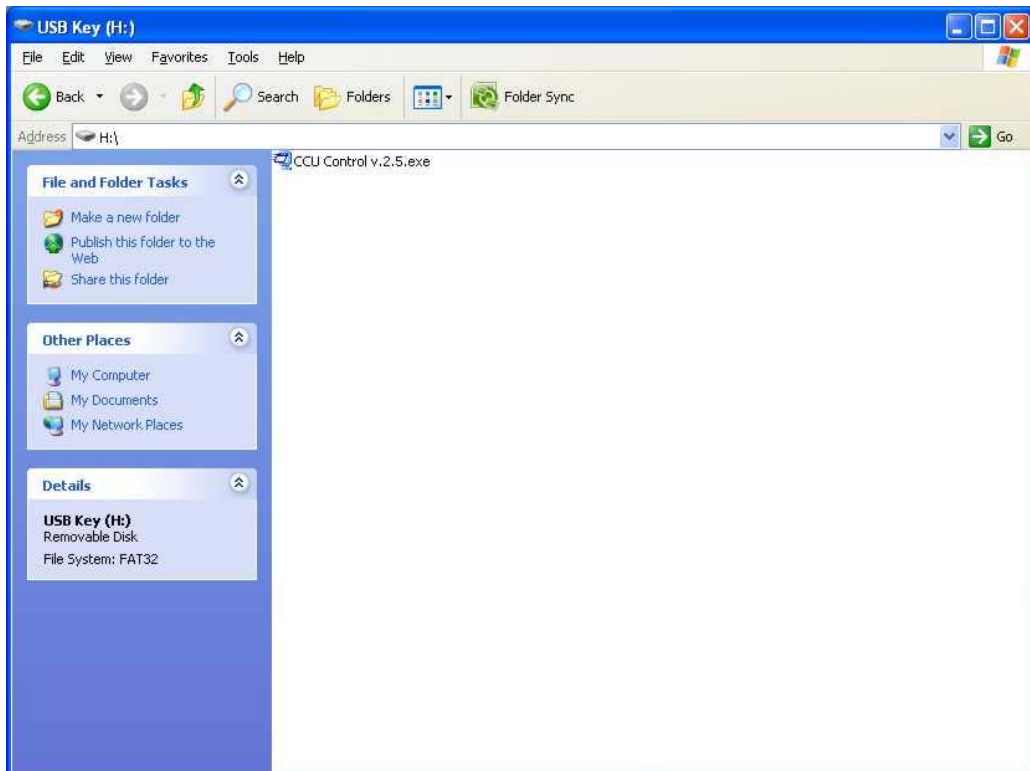

12. Double click on the '**CCU Control v.X.X.exe**' (where X.X is the version number) file name.
13. A new window named '**WinZip Self-Extractor**' is open. In the line '**Unzip to folder**', type the letter of your USB key drive (in my case this is the H: letter), or select it with the '**Browse...**' button.

**Warning: Only the letter of your drive must appear in this line (see picture).**

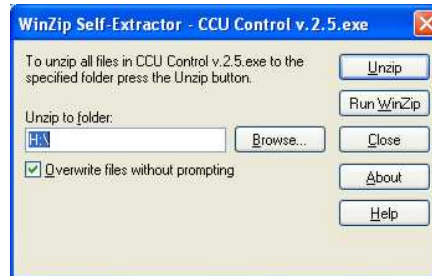


14. Click on the '**Unzip**' button. The file extraction start. When done, you have a message box that says the end of the operation. Click on the '**OK**' button, then on the '**Close**' button on the '**WinZip Self-Extractor**'. The extraction is finish. Now go to the next step ([Verify your files](#)).


## Verify your files

15. Open the folder named 'CCU Control' on your USB key. You see 3 files (CCU Control.aliases, CCU Control.exe and CCU Control.ini) and a subfolder (data).


**WARNING: Be sure that the 3 files (CCU Control.aliases, CCU Control.exe and CCU Control.ini) and a subfolder (data) are on the folder with this structure -> "[Letter of your USB drive]:\CCU Control" (Where 'Letter of your USB drive' is 'H' in my example). No other subfolders must appear (by example: "H:\CCU Control\CCU Control" is a bad directory. The good one is "H:\CCU Control").**

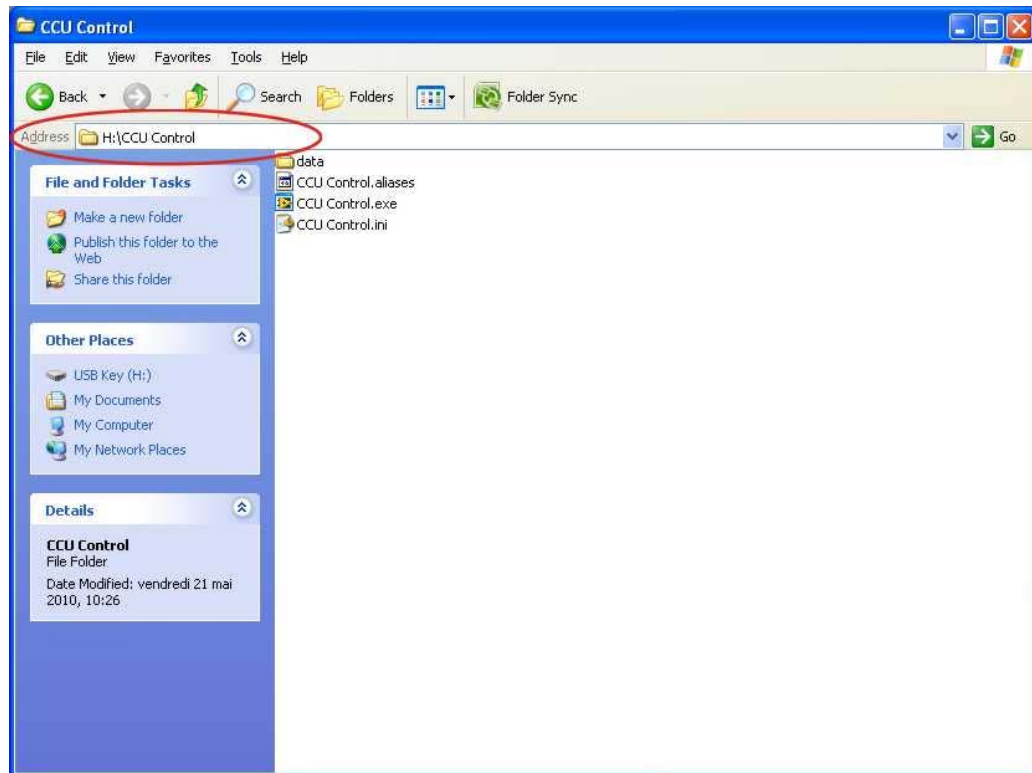

16. Right click on the 'CCU Control.exe' name then select 'Properties' in the context menu.

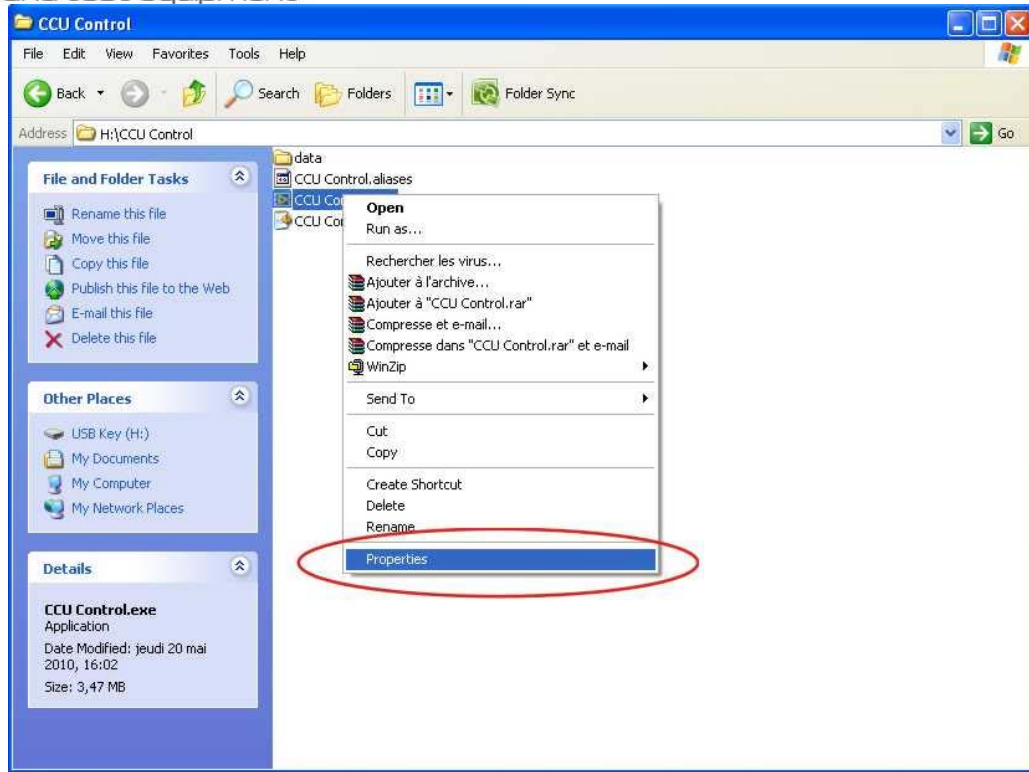

17. In the 'Version' tab you see the 'File Version' number. The format is X.X.X.X. Verify this is the good one.

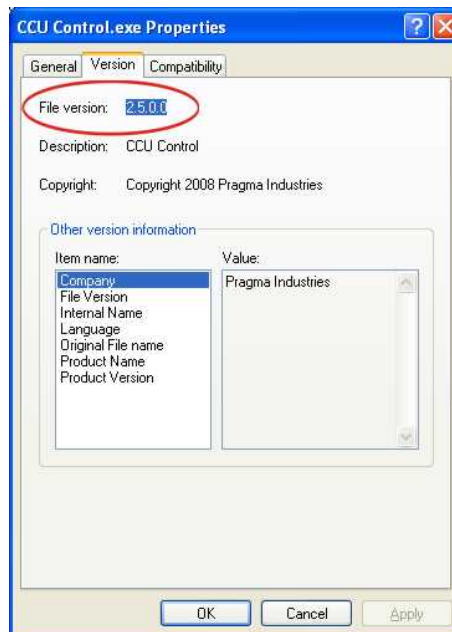

18. You can now update the CCU software going to step 19 (Update your CCU)

## Update your CCU

19. Insert the USB key into the receptacle on the front panel of the CCU.
20. Start your Cell Compression System.
21. Once system has started, it check the USB key :
  - If your system is up to date, a pop-up will inform you.



- If an update is required, the following message appears.




In this case, choose if you want to update the system or not. A pop-up confirm you the start of the process.

The system will update and restart.



**Warning! Do not remove the USB key until the Cell Compression Unit has restarted.**

- If there was a problem during the check, or if the key has been removed during the update, the pop-up appears. In this case, restart the procedure from step 2.

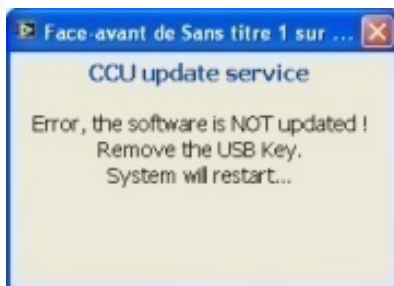

**PRAGMA INDUSTRIES SAS**

665 rue de Bassilour, ZA de Bassilour, 64210 Bidart

Tel : +33 (0)559 512 755 Fax : +33 (0)559 230 798

[www.pragma-industries.com](http://www.pragma-industries.com) - [contact@pragma-industries.com](mailto:contact@pragma-industries.com)

SAS au capital de 459 880€ RCS Bayonne 478 038 219 00034 APE 7490B TVA FR30 478 038 219